




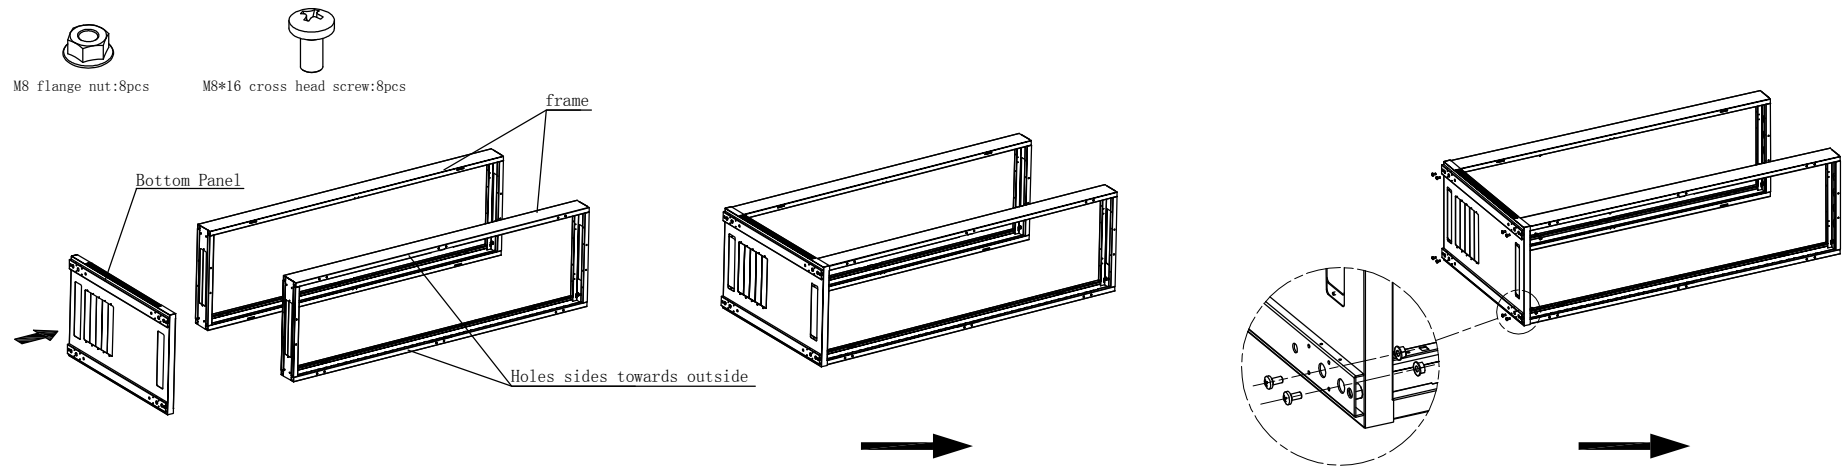


Step 1:Assemble the frame and bottom panel

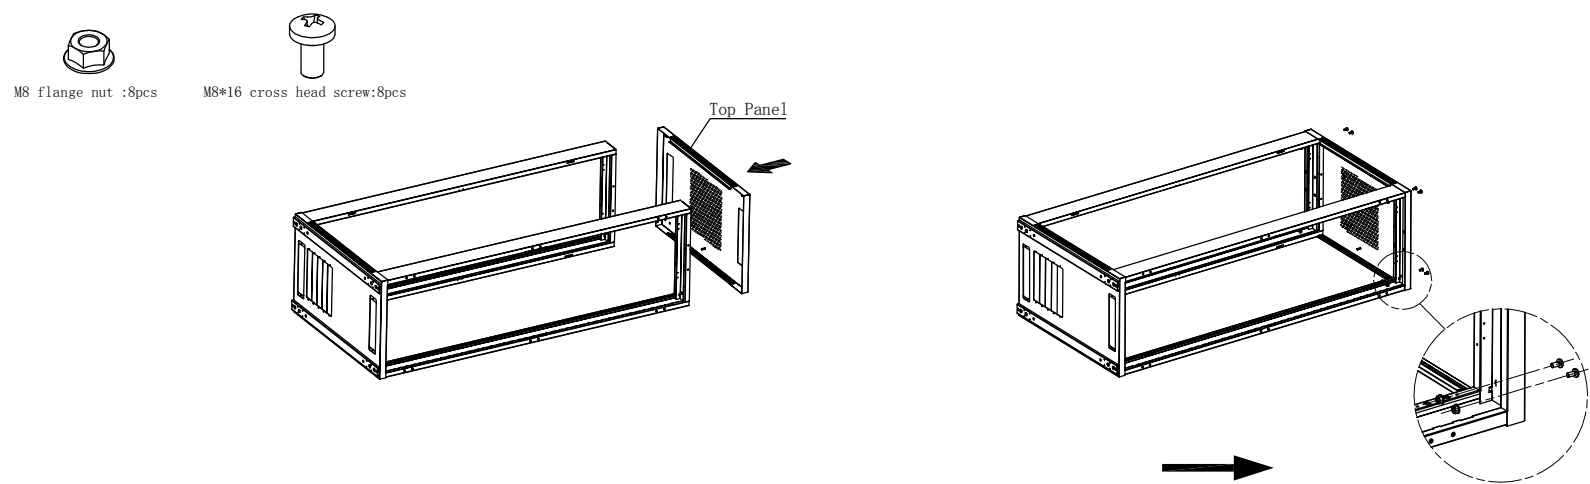


Step 2:Fix the top Panel

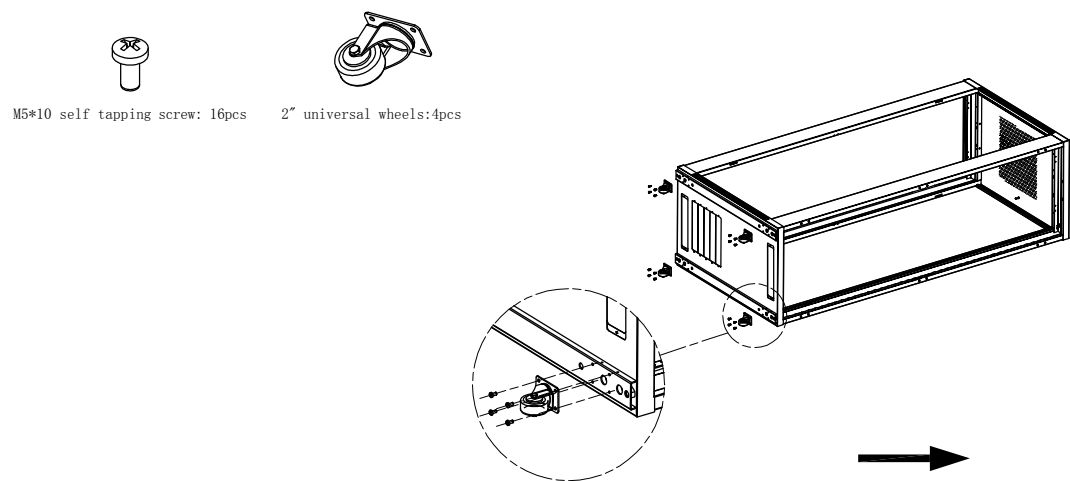


Step 3:Fix the wheels

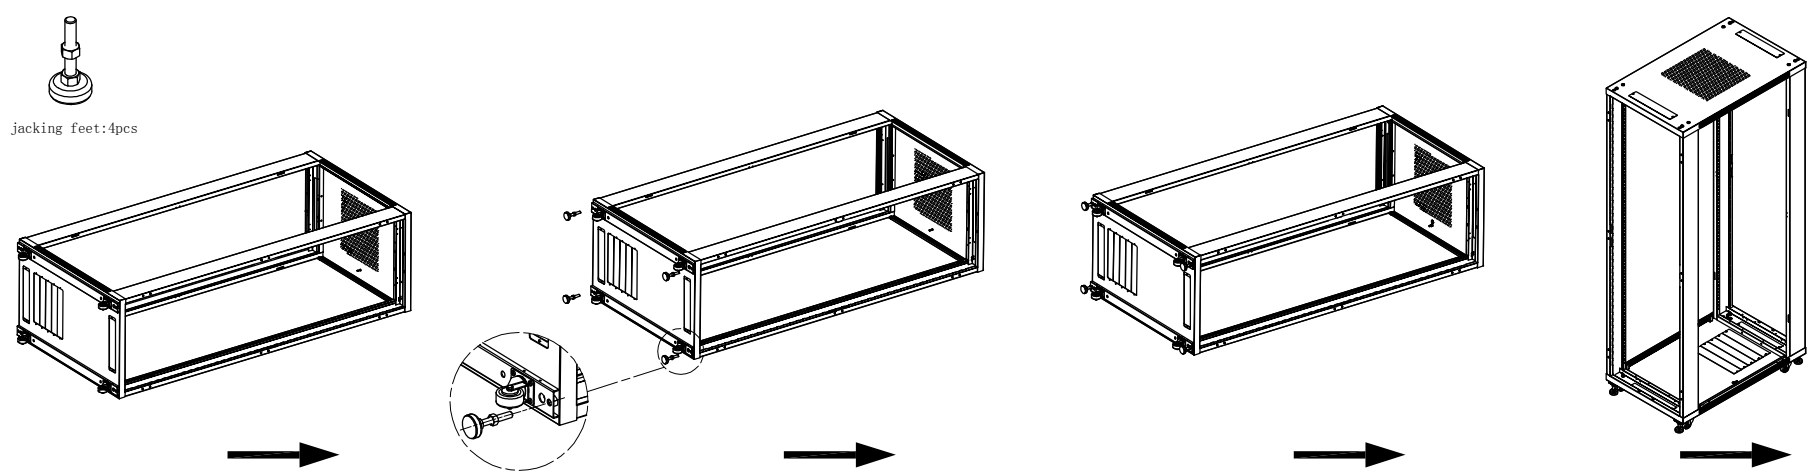


Step 4:Fix the jacking feet and stand up the cabinet

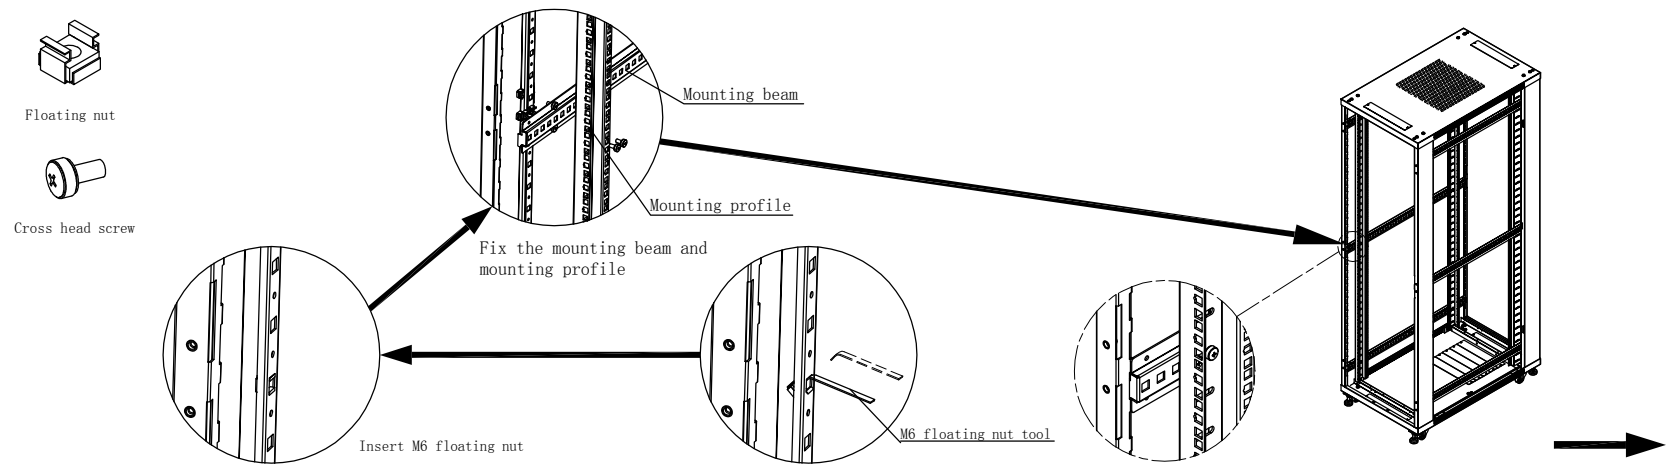


Step 5:Fix the mounting beam and mounting profile

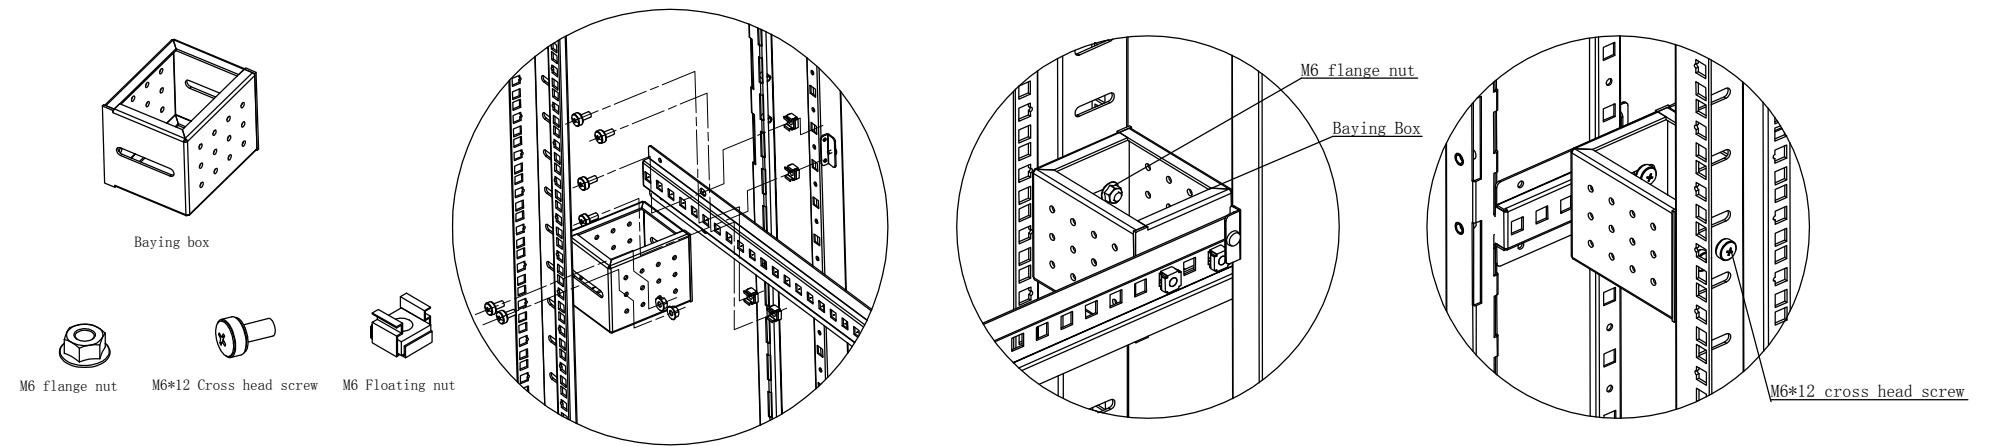


For 800mm width cabinet,use baying box to connect mounting beam and mounting profile,guarantee the cabinet with 19" installation, as shown in the picture.

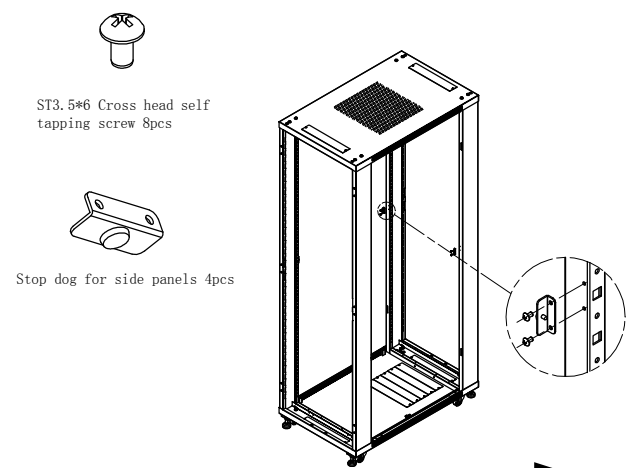

Step 6:Fix Stop dog for side panels

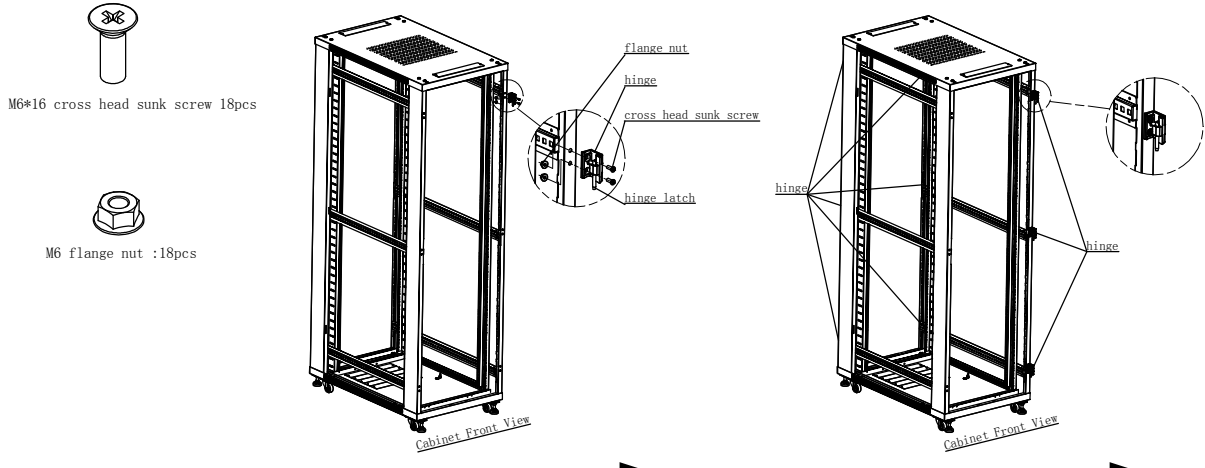


Step 7:Fix door hinge (Fix on the frame,Front door need 3pcs,rear door need 6pcs)

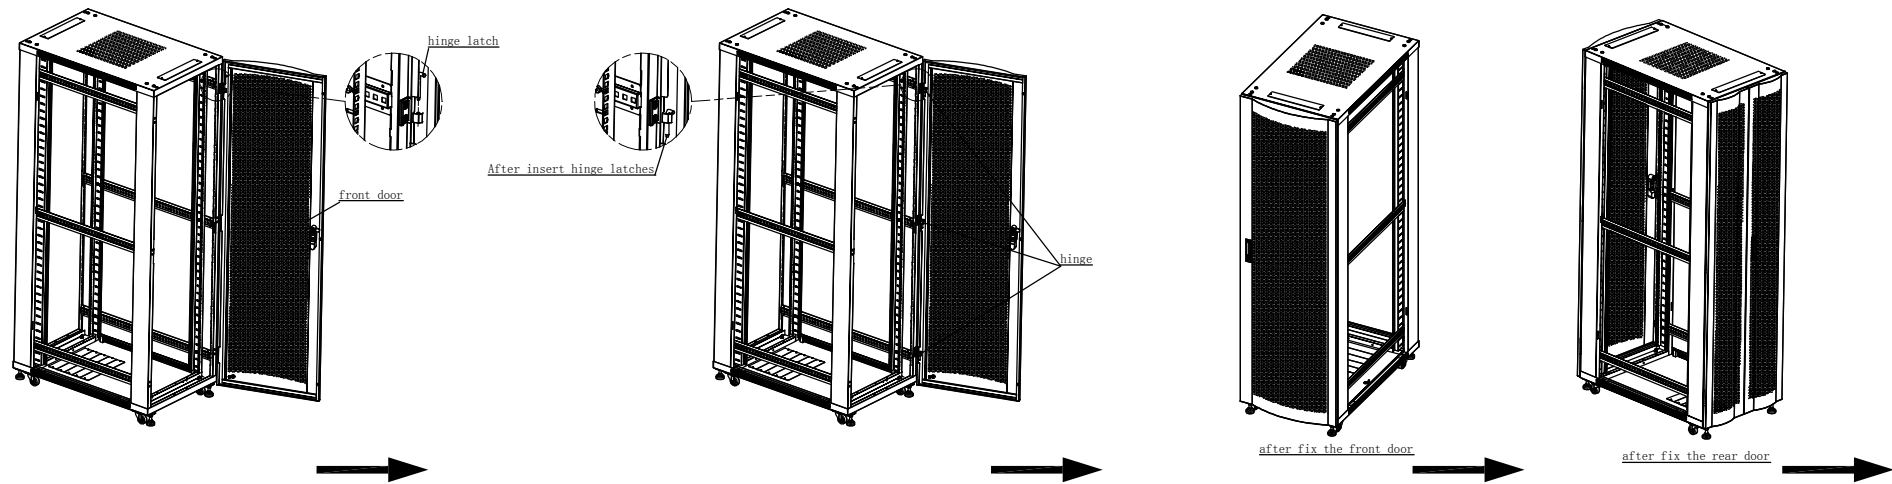


Step 8:Fix the front door and rear door

Take out the hinge latch first,Buckle up the doors with 3pcs hinges(where door have 3 indentation),insert the hinge top-down(Repeat step 7 to fix other doors)

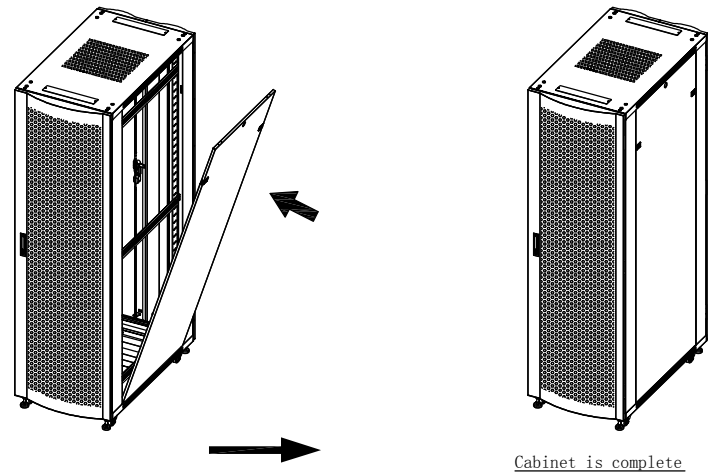

Step 9:Fix the side panels (1pc for right side, 1pc for left side)

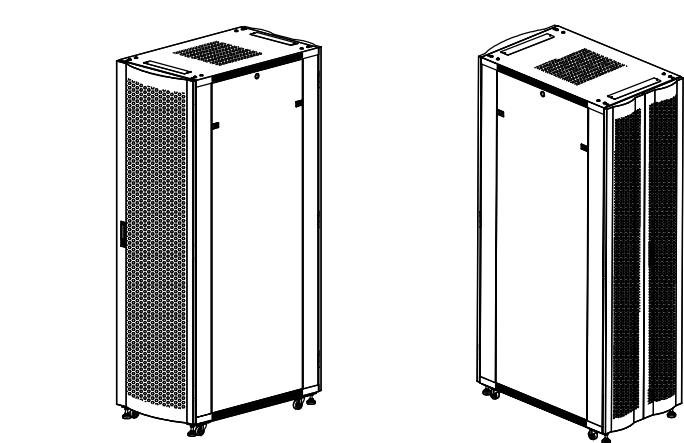

3D view from eash side

Add 1(Way for fix assistant mounting profile):

Add 2(Way to fix the vertical cable manager):

